


printserver ONE

Quick Installation Guide



Overview

This 'Quick Installation Guide' describes the hardware installation and initial setup of the printserver ONE.

Table of contents ⇒  1.

Do you need assistance? Contact us!



Monday to Thursday 8:00 a.m. to 4:45 p.m. and
Friday 8:00 a.m. to 3:15 p.m. (CET)



+49 (0)521 94226-44



support@seh.de



www.seh-technology.com

Customers from the United States of America and Canada please contact the North American support.



Monday to Friday 9:00 a.m. to 5:00 p.m. (EST/EDT)



+1-610-943-3226



support@sehtechnology.com



www.seh-technology.com

Überblick

Dieser 'Quick Installation Guide' beschreibt die Hardware-Installation und Inbetriebnahme des printserver ONE.

Inhaltsverzeichnis ⇒  13.

Benötigen Sie Hilfe? Kontaktieren Sie uns!



Montag–Donnerstag 8:00–16:45 Uhr
Freitag 8:00–15:15Uhr



+49 (0)521 94226-44



support@seh.de



www.seh.de



Contents

General Information	2
Purpose	2
Scope of Supply	2
Technical Data	3
LED Display	4
Type Plate	4
Safety Regulations	5
Hardware Installation	6
Finding the Print Server in the Network	7
Software Installation 'SEH Product Manager'	7
Finding the Print Server (Determining the IP Address)	8
Changing the IP address	9
Printing via the Print Server	10
Printing in Windows 10	10
Printing in macOS	11
Configuring the printserver ONE	12
Regulatory Compliance Information	26
Open Source Software License Disclaimer and License Texts	29

Purpose

The print server 'printserver ONE' is an active network component which directly integrates printers or multifunction printers (MFP) into networks. The print server receives print jobs and forwards them to the printer or MFP.

The administration of the printserver ONE is done via the 'Printserver Control Center' and the 'SEH Product Manager'.

Scope of Supply

Check the package content before getting started:



Print server

Print server 'printserver ONE'



Quick
Installation
Guide


The Quick Installation Guide provides a brief description of the installation of the printserver ONE.
(This document)



Power pack

External power pack

Technical Data

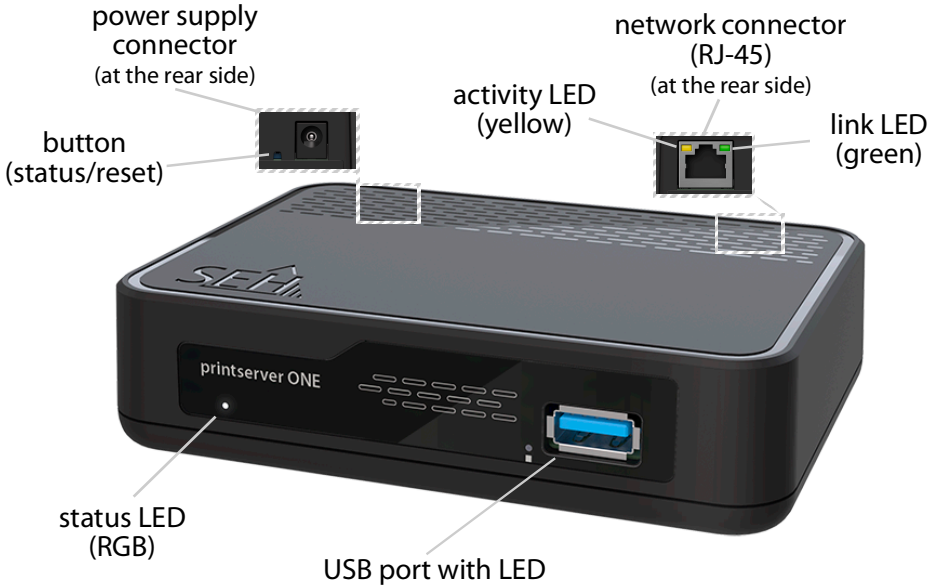

Properties	Values
Network connector	logical: IEEE 802.3 (1000BaseT, 100BaseTX and 10BaseT) physical: 1 × RJ-45 (STP, category 5 or better)
Printer port	• 1 × USB 3.0 SuperSpeed
Current input	• max. 1.4 A at 5 V with full load on the USB port • approx. 0.5 A at 5 V when connecting a printer
Power consumption	• max. 8W • approx. 2.5 W with a printer • approx. 22–70 kWh/year, depending on utilization
Operating environment	ambient temperature: 5–40 °C relative humidity: 20–80%
Dimensions	width: 120 mm height: 29 mm depth: 84 mm weight: 116 g (without power supply unit)

LED Display

The LEDs of the print server provide information about its status.

LED	Action	Color	Description
Link and Activity	permanently off	–	There is no connection to the network.
Link	permanently on	green	There is a connection to the network.
Activity	blinks at irregular intervals	yellow	Indicates the exchange of printing data packets.
Status	blinks 3 times	green	Indicates the assignment of a Zeroconf IP address.
	blinks 2 times	green	Indicates the assignment of an IP address that is not from the Zeroconf range.
	blinks	white	TCP packets are received.
USB port	permanently off	–	No printer is connected to the USB port.
	permanently on	green	A printer is connected to the USB port.



Important:

When the device starts up, the behavior of the LEDs differs from this description.

Type Plate

The type plate gives important product information, such as hardware and certification information as well as the serial number. The serial number contains the production date: nnn YYYY MM nnnnn.

This information helps you e.g. during maintenance and is needed for support requests.

Print servers are active network components for printers in office environments and are designed for the direct integration of printers into networks.


**Important:**

Before starting the installation and the initial setup procedure as well during the operation of the print server, note the following safety regulations. Their purpose is to protect yourself and others from personal injuries, and to avoid damage to the equipment.

- Read the documentation and make sure that your system meets the requirements listed therein.
- Avoid contact with humidity or liquids.
- The device must only be connected and operated if it is in perfect condition.
- Make sure that no-one steps on or stumbles over the cables.
- If the supplied power cord cannot be used in your country, acquire an appropriate power cord that suits national provisions. For more information, consult your retailer.
- Do not connect a telephone cable to the RJ-45 connector. The RJ-45 connector may only be connected to SELV voltages. For the connection to the RJ-45 connector only STP cabling (category 5 or better) may be used. The shielding must fit flushly to the connector.
- Do not open the housing. Unauthorized modifications to the device can affect the product certification and are forbidden.
- The device must not be directly connected to outdoor lines.
- The device must only be operated using the power pack included in the package.
- Only use a certified USB cable (< 3 m) listed at www.usb.org.
- Electrostatic discharges (ESD) may impair device performance.
- An interruption of the supply voltage may impair device performance or cause malfunctions.

Hardware Installation

A printer can be connected via the USB port of the printserver ONE and made available in the network.

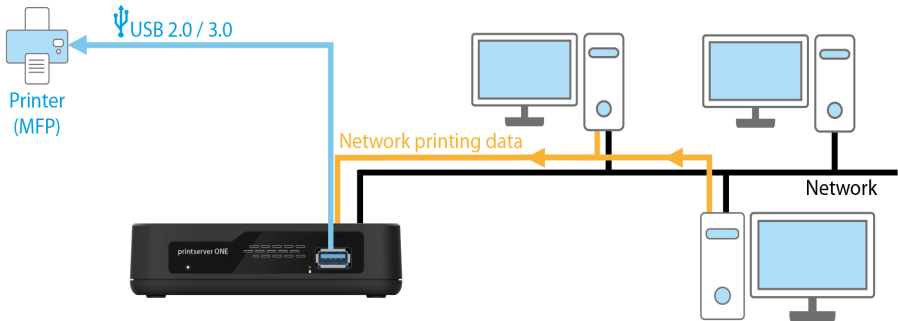

1. Turn the printer off.
2. Disconnect the power cord from the printer. (Interrupt power supply).
3. Connect the printer and the print server using the USB cable.



Important:

Only use USB cables shorter than 3 meters.

4. Connect the network cable (RJ-45) to the print server.
5. Connect the power cord to the print server.
6. Connect the power cord to the printer.
7. Turn the printer on.



Important:




In order to verify the installation you can print a status page. To do this, press the print server's button for a short time.

A status page can only be printed if the printer supports the data formats ASCII, PostScript, DATAMAX (label printer), or Citizen-Z (label printer).

Finding the Print Server in the Network

Once the print server is connected to the network, it checks whether an IP address can be obtained from the boot protocols BOOTP or DHCP. If this is not the case, the print server assigns itself an IP address via Zeroconf from the address range (169.254.0.0/16) which is reserved for Zeroconf.

By means of the SEH Product Manager tool you can find the print server's IP address and, if necessary, assign a suitable IP address to the print server, as described below.

- 'Software Installation 'SEH Product Manager'' ⇒ 7
- 'Finding the Print Server (Determining the IP Address)' ⇒ 8
- 'Changing the IP address' ⇒ 9



Important:

The client, printer and print server must be assigned to the same local network segment.

Software Installation 'SEH Product Manager'

The 'SEH Product Manager' is a software tool developed by SEH Computertechnik GmbH for the administration and management of SEH Computertechnik GmbH devices on the network.

The software is installed on all clients from which SEH Computertechnik GmbH devices are to be administrated and managed on the network.


First, you have to download the installation file for the SEH Product Manager from the website of SEH Computertechnik GmbH:



<http://www.seh-technology.com/services/downloads/download-printserver-extern/printserver-one.html>



System requirements:

- Windows 10, Windows Server 2012 or later
macOS 10.12.x or later
 - The installation can only be carried out by users with administrative rights.
1. Start the SEH Product Manager installer.
 2. Follow the installation routine.
 - ↳ The SEH Product Manager is installed on your client.



You can recognize the SEH Product Manager by its icon: . The program is started with the usual methods of your operating system.

The program automatically searches for SEH Computertechnik devices on the network after starting. For more information see the   'SEH Product Manager Online Help'.

Finding the Print Server (Determining the IP Address)


All SEH print servers found in the network are displayed in the SEH Product Manager.

If the print server has received an IP address via the boot protocols BOOTP or DHCP, you can identify it with the help of its type designation. If you are using several print servers of the same type, identify the print server using its hardware address. You can find the hardware address in the type plate at the bottom of the print server.

If the print server has assigned itself an IP address via Zeroconf from the address range (169.254.0.0/16) which is reserved for Zeroconf, you can assign a new IP address to the print server, see  9.

Changing the IP address

1. Start the 'SEH Product Manager' on your client.
↳ After the SEH Product Manager was started, it searches the network for existing devices and displays them in the 'device list'.

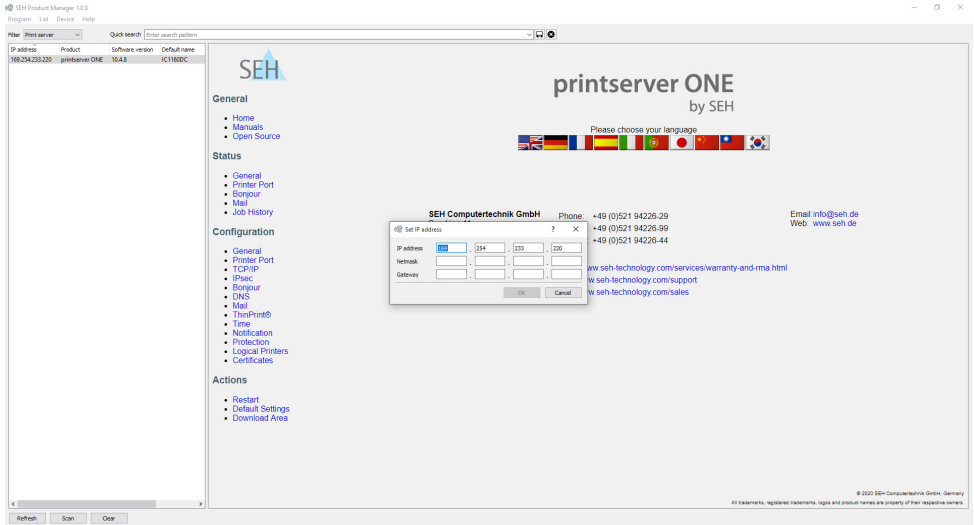



*Detailed information on how to use the SEH Product Manager can be found in the Online Help. To start the online help, select **Help – Online Help** from the menu bar.*

2. Mark the print server in the device list.
3. Select **Set IP address** from the menu **Device** or via the context menu.
4. Click **OK** to confirm the IP settings.


Printing via the Print Server

The print server embeds non-network-ready printers into the network. In order to print via the print server, the printer connected to the print server must be set up as printer on the client system.

The printer can be set up in different operating systems.

- 'Printing in Windows 10' ⇒  10
- 'Printing in macOS' ⇒  11





More installation procedures for other operating systems and printing protocols can be found in the print server User Manual. The download link can be found on page ⇒  7

Printing in Windows 10

The printer is set up on the client using the Windows settings.

Requirements:

- The hardware installation has been done, see ⇒  6
- The print server and the printer are turned on.
- The print server is known to the network via its IP address, see ⇒  7

1. Open the **Start** menu.
2. Select **Settings**.
The **Settings** dialog appears.
3. Select **Devices**.
The **Add printers & scanners** dialog appears.
4. Select **Add a printers or scanners**.
Printers and scanners are searched for.
5. Scroll down to the end of the result list and select **The printer that I want isn't listed**.
The **Add printer** dialog appears.
6. Tick **Add a local printer or network printer with manual settings**.
7. Click **Next**.
8. Tick **Create a new port**.
9. From the list **Type of port**, select **Standard TCP/IP Port**.
10. Click **Next**.
11. In the **Hostname or IP address** box, enter the IP address of the print server.



WARNING

Omit leading zeros from the IP address.


12. Enter a description into the **Port name** box.
13. Untick **Query the printer and automatically select the driver to use**.

14. Click **Next**.
15. (In the area **Device Type**, tick **Standard**.)
16. (Select **Generic Network Card** from the list.)
17. (Click **Next**.)
18. From the lists **Manufacturer and Printers**, select the printer model.
19. Click **Next**.
20. Enter a description into the **Printer name** box.
21. Click **Next**.
The printer is being installed.
22. Tick **Do not share this printer**.
23. Click **Next**.
24. Click **Print a test page**.
The test page is printed.
25. Click **Finish**.
↳ The printer is set up on the client. If you print via the printer you have set up, the print job will be printed on the printer connected to the print server.

Printing in macOS

The printer is set up on the client using the system preferences.

Requirements:

- The hardware installation has been done, see ⇨ 6
 - The print server and the printer are turned on.
 - The print server is known to the network via its IP address, see ⇨ 7
1. Open the System **Preferences**.
 2. Click **Printers and Scanners**.
 3. Click the icon .
The **Add** dialog appears.
 4. Click **IP**.
 5. Into the **IP Address** box, enter the IP address of the print server (with leading zeros).
 6. From the **Protocol** list, select **Select Internet Printing Protocol - IPP**.
 7. Enter freely definable names for **Name** and **Location**.
 8. From the **Use** list, select the printer driver.
 9. Click **Add**.
The setting up dialog appears.
 10. Configure the printer options.
 11. Click **OK** to confirm.
↳ The printer is set up on the client. If you print via the printer you have set up, the print job will be printed on the printer connected to the print server.

Configuring the printserver ONE

The printserver ONE has a user interface, the Printserver Control Center, which can be opened in an Internet browser (e.g. Microsoft Edge or Safari).

The printserver ONE can be configured, monitored, and maintained via the Printserver Control Center.

1. Open your browser.
2. Enter the IP address of the printserver ONE as the URL.
↳ The Printserver Control Center appears in the browser.



Important:

If the Printserver Control Center is not displayed, check if a gateway is configured (⇒ 7) and check the proxy settings of your browser.

printserver ONE
by SEH

Please choose your language

SEH Computertechnik GmbH
Suedring 11
33647 Bielefeld, Germany

Phone: +49 (0)521 94226-29
Fax: +49 (0)521 94226-99
Support: +49 (0)521 94226-44

Email: info@seh.de
Web: www.seh.de

Free Guarantee Extension: <https://www.seh-technology.com/services/warranty-and-rma.html>
Support Contacts & Information: <http://www.seh-technology.com/support>
Sales Contacts & Information: <http://www.seh-technology.com/sales>

© 2023 SEH Computertechnik GmbH, Germany
All trademarks, registered trademarks, logos and product names are property of their respective owners.



Detailed information on the administration, configuration and monitoring of the print server can be found in the print server user manual.



Allgemeine Information	14
Verwendungszweck	14
Lieferumfang	14
Technische Daten	15
LED-Anzeige	16
Typenschild	16
Sicherheitsvorschriften	17
Hardware-Installation	18
Printserver im Netzwerk finden	19
Software Installation 'SEH Product Manager'	19
Printserver finden (IP-Adresse ermitteln)	20
IP-Adresse ändern	21
Drucken mit dem Printserver	22
Drucken in Windows 10	22
Drucken in macOS	24
Printserver konfigurieren	25
Regulatory Compliance Information	26
Open Source Software License Disclaimer and License Texts	29

Verwendungszweck

Der Printserver 'printserver ONE' ist eine aktive Netzwerkkomponente, die das direkte Einbinden eines Druckers oder Multifunktionsgerätes (MFG) in ein Netzwerk ermöglicht. Der Printserver empfängt Druckaufträge und leitet diese an den Drucker oder das MFG weiter.

Die Verwaltung des printserver ONE erfolgt über den 'Printserver Control Center' und den 'SEH Product Manager'.

Lieferumfang

Überprüfen Sie den Packungsinhalt auf Vollständigkeit, bevor Sie die Installation beginnen:



Print server

Printserver 'printserver ONE'



Quick
Installation
Guide


Der Quick Installation Guide beinhaltet eine kurze Beschreibung der Installation des printserver ONE.
(Dieses Dokument)



Netzteil

Externes Netzteil

Technische Daten

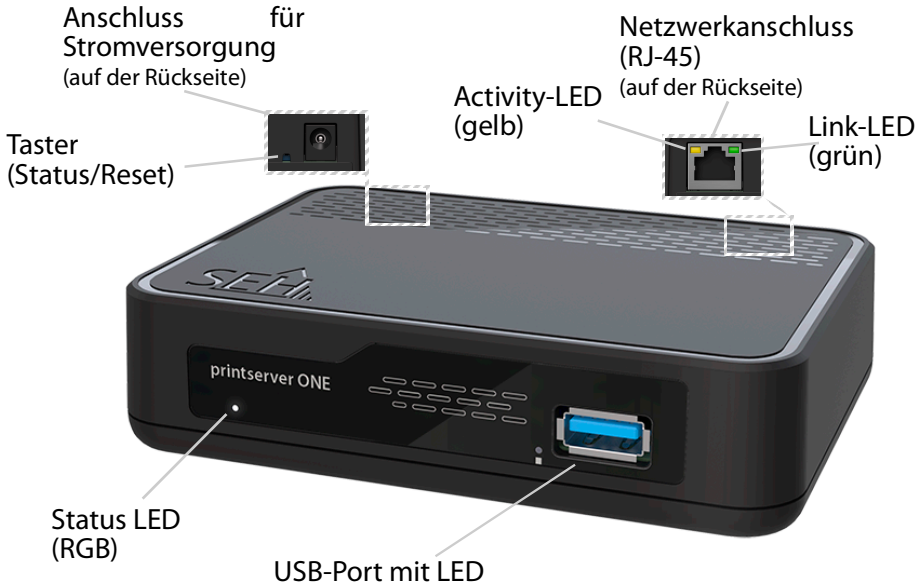

Eigenschaften	Werte
Netzwerkanschluss Logisch: Physisch:	IEEE 802.3 (1000BaseT, 100BaseTX und 10BaseT) 1 × RJ-45 (STP, Kategorie 5 oder besser)
Geräteanschluss	• 1 × USB 3.0 SuperSpeed
Stromaufnahme	• max. 1,4 A bei 5 V Gleichspannung ohne Last • ca. 0,5 A bei 5 V Gleichspannung bei Anschluss eines Druckers
Leistungsaufnahme	• max. 8 W • ca. 2,5 W mit einem Drucker • ca. 22–70 kWh/Jahr, je nach Auslastung
Betriebsumgebung	Umgebungstemperatur: 5–40 °C Relative Luftfeuchtigkeit: 20–80%
Abmessungen	Breite: 120 mm Höhe: 29 mm Tiefe: 84 mm Gewicht: 116 g (ohne Netzteil)

LED-Anzeige

Durch die Interpretation des LED-Leuchtverhaltens kann der Zustand des Printers ermittelt werden.

LED	Aktion	Farbe	Beschreibung
Link und Activity	Dauer-Aus	–	Es besteht keine Verbindung zum Netzwerk.
Link	Dauer-An	grün	Es besteht eine Verbindung zum Netzwerk.
Activity	unregelmäßiges Blinken	gelb	Signalisiert den Austausch von Druckdatenpaketen.
Status	3 x Blinken	grün	Signalisiert die Vergabe einer Zeroconf-IP-Adresse.
	2 x Blinken	grün	Signalisiert die Vergabe einer IP-Adresse, die nicht aus dem Bereich Zeroconf kommt.
	Blinken	weiß	TCP Pakete werden empfangen.
USB-Port	Dauer-Aus	–	Es ist kein USB-Gerät am betreffenden Port angeschlossen.
	Dauer-An	grün	Es ist ein USB-Gerät am betreffenden Port angeschlossen.
	Dauer-An	orange	Die Verbindung zum betreffenden Port und dem daran angeschlossenen USB-Gerät ist aktiviert.



Wichtig:

Während des Einschaltvorgangs weicht das LED-Leuchtverhalten von der Beschreibung ab.

Typenschild

Auf dem Typenschild finden Sie wichtige Angaben zu Ihrem Produkt, wie z. B. Informationen zur Hardware und zu Zertifizierungen sowie die Seriennummer. Die Seriennummer enthält das Produktionsdatum: nnn YYYY MM nnnnn.

Diese Angaben helfen Ihnen z. B. bei der Wartung und Sie benötigen sie für Support-Anfragen.


Printserver sind aktive Netzwerkkomponenten für Drucker in Büroumgebungen und dienen zum direkten Einbinden von Druckern in Netzwerken.

**Wichtig:**

Beachten Sie vor Inbetriebnahme und beim Betrieb des Printservers die folgenden Sicherheitsvorschriften, um sich und andere vor Personenschäden zu schützen sowie Beschädigungen am Gerät zu vermeiden.

- Lesen Sie die Dokumentation und stellen Sie sicher, dass Ihr System den aufgeführten Anforderungen entspricht.
- Das Gerät darf nicht mit Feuchtigkeit oder Flüssigkeit in Berührung kommen.
- Das Gerät darf nur in unversehrttem Zustand angeschlossen und betrieben werden.
- Verlegen Sie alle Kabel so, dass niemand darauf treten oder darüber stolpern kann.
- Falls das beiliegende Netzkabel für Ihr Land nicht einsetzbar ist, beschaffen Sie ein passendes Netzkabel mit der jeweiligen nationalen Zulassung. Fragen Sie hierzu Ihren Fachhändler.
- Schließen Sie keine Telefonleitungen an den RJ-45-Stecker an. An diesen darf nur Sicherheitskleinspannung angeschlossen werden. Verwenden Sie für den Anschluss an den RJ-45-Stecker nur STP-Kabel (Kategorie 5 oder besser). Kabelschirm und Steckerschirm des Kabels müssen flächig verbunden sein.
- Öffnen Sie nicht das Gehäuse. Eigenmächtige konstruktive Veränderungen am Gerät können die Produktzertifizierung beeinträchtigen und sind verboten.
- Das Gerät darf nicht direkt an Leitungen die im Freien verlegt sind (outdoor) angeschlossen werden.
- Das Gerät darf nur mit dem mitgelieferten Netzteil betrieben werden.
- Verwenden Sie als USB-Kabel ein zertifiziertes USB-Kabel (< 3 m), das unter www.usb.org gelistet ist.
- Elektrostatische Entladungen (ESD) können die Geräteleistung beeinträchtigen.
- Eine Unterbrechung der Versorgungsspannung kann die Geräteleistung beeinträchtigen oder Fehlfunktionen verursachen.

Über den USB Anschluss des printserver ONE kann ein Drucker angeschlossen und im Netzwerk zur Verfügung gestellt werden.

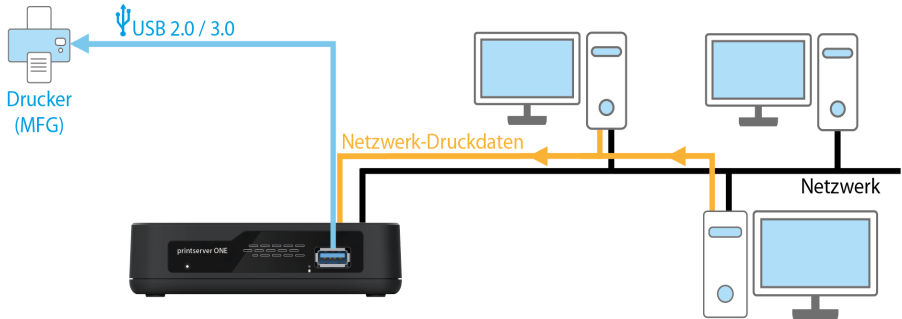

1. Schalten Sie den Drucker aus.
2. Entfernen Sie das Netzkabel vom Drucker. (Stromversorgung unterbrechen)
3. Verbinden Sie den Drucker und den Printserver mit dem USB-Kabel.



Wichtig:

Verwenden Sie hierzu ausschließlich USB-Kabel mit Längen unter 3 Metern.

4. Verbinden Sie das Netzkabel (RJ-45) mit dem Printserver.
5. Verbinden Sie das Netzkabel mit dem Printserver.
6. Verbinden Sie das Netzkabel mit dem Drucker.
7. Schalten Sie den Drucker ein.



Wichtig:

Zur Überprüfung der Installation können Sie eine Statusseite drucken. Drücken Sie hierfür kurz den Taster am Printserver.

Eine Statusseite kann nur gedruckt werden, wenn der Drucker das Datenformat ASCII, PostScript, DATAMAX (Labeldrucker) oder Citizen-Z (Labeldrucker) unterstützt.

Nachdem der Printserver an das Netzwerk angeschlossen ist, erhält der Printserver automatisch eine IP-Adresse über die Bootprotokolle BOOTP oder DHCP. Ist das nicht der Fall, gibt sich der Printserver über Zeroconf selbst eine IP-Adresse aus dem für Zeroconf reservierten Adressbereich (169.254.0.0/16).

Mit dem SEH Product Manager Tool können Sie, wie nachfolgend beschrieben, die IP-Adresse des Printservers ermitteln und bei Bedarf eine frei definierbare IP-Adresse im Printserver speichern.

- 'Software Installation 'SEH Product Manager'' ⇨ 19
- 'IP-Adresse ändern' ⇨ 21



Wichtig:

Der Client, der Drucker und der Printserver müssen demselben lokalen Netzwerksegment zugeordnet sein.

Software Installation 'SEH Product Manager'

Der 'SEH Product Manager' ist ein von SEH Computertechnik GmbH entwickeltes Software-Tool zur Administration und Verwaltung von SEH Computertechnik GmbH-Geräten im Netzwerk.

Die Software wird auf allen Clients installiert, von denen aus SEH Computertechnik GmbH-Geräte im Netzwerk administriert und verwaltet werden sollen.


Laden Sie zuerst die Installationsdatei für den SEH Product Manager von der SEH Computertechnik GmbH-Homepage:


<http://www.seh-technology.com/de/service/downloads/download-printserver-extern/printserver-one.html>



Systemvoraussetzungen:

- Windows 10, Windows Server 2012 oder höher
macOS 10.12.x oder höher
 - Die Installation kann ausschließlich durch Benutzer mit administrativen Rechten durchgeführt werden.
1. Starten Sie die SEH Product Manager-Installationsdatei.
 2. Folgen Sie der Installationsroutine.
- ↳ Der SEH Product Manager ist auf Ihrem Client installiert.


Sie erkennen den SEH Product Manager an seinem Icon: . Er wird wie auf Ihrem Betriebssystem üblich gestartet.

Nach dem Programmstart wird automatisch nach SEH Computertechnik-Geräten im Netzwerk gesucht. Für mehr Informationen ⇒  'SEH Product Manager Online Hilfe'.

Printserver finden (IP-Adresse ermitteln)


Alle im Netzwerk gefundenen SEH Printserver werden in der Geräteliste angezeigt.

Hat der Printserver eine IP-Adresse über die Bootprotokolle BOOTP oder DHCP erhalten, können Sie ihn anhand seiner Typenbezeichnung identifizieren. Setzen Sie mehrere Printserver desselben Typs ein, identifizieren Sie den Printserver mithilfe seiner Hardware-Adresse. Diese finden Sie im Typenschild auf der Unterseite des Printservers.

Hat der Printserver sich über Zeroconf selbst eine IP-Adresse aus dem für Zeroconf reservierten Adressbereich (169.254.0.0/16) gegeben, erscheint er in der Geräteliste unter dem Filter 'Zeroconf'. Weisen Sie dem Printserver eine IP-Adresse zu, siehe ⇒  21.

IP-Adresse ändern

1. Starten Sie den 'SEH Product Manager' auf Ihrem Client.
↳ Nach dem Start des SEH Product Manager, wird im Netzwerk automatisch nach Geräten gesucht. Diese werden in der 'Geräteliste' angezeigt.


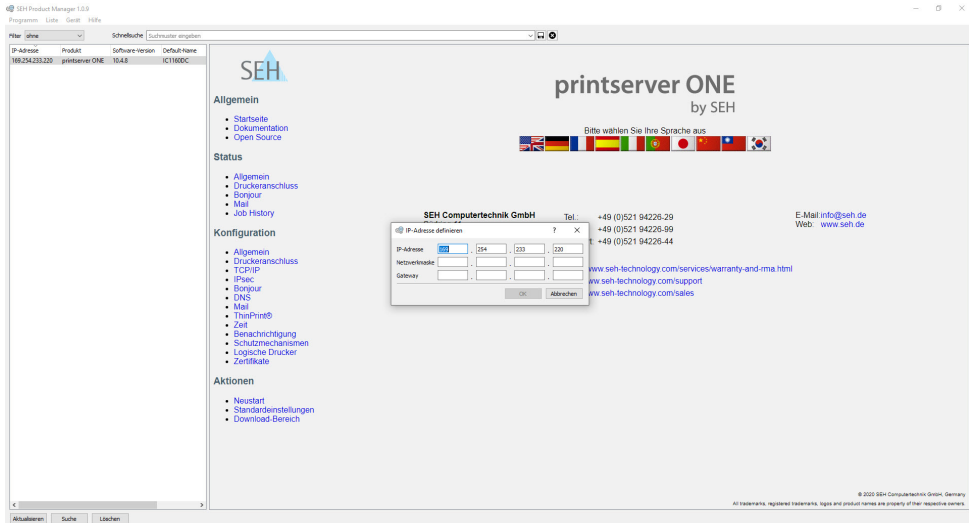


Detaillierte Informationen zur Bedienung des SEH Product Managers entnehmen Sie der Online Hilfe. Um die Online Hilfe zu starten, wählen Sie im Menü **Hilfe** den Befehl **Online Hilfe**.

2. Markieren Sie den Printserver in der Geräteliste.
3. Wählen Sie **IP-Adresse definieren** aus dem Menü **Gerät** oder über das Kontextmenü.
4. Bestätigen Sie die IP-Einstellungen mit **OK**.

Der Printserver bindet nicht-netzwerkfähige Drucker in das Netzwerk ein. Damit über den Printserver gedruckt werden kann, muss der an den Printserver angeschlossene Drucker auf dem Client-System als Drucker angelegt werden.

Der Drucker kann in verschiedenen Betriebssystemen angelegt werden.

- 'Drucken in Windows 10' ⇨  22
- 'Drucken in macOS' ⇨  24





Weitere Installationsverfahren für andere Betriebssysteme und Druckprotokolle entnehmen Sie der Printserver-Benutzerdokumentation. Den Download-Link finden Sie auf Seite

⇨  19

Drucken in Windows 10

Der Drucker wird über die Windows-Einstellungen auf dem Client angelegt.

Voraussetzungen:

- Die Hardware-Installation wurde ausgeführt, siehe ⇨  18
 - Der Printserver und der Drucker sind eingeschaltet.
 - Der Printserver ist mit einer IP-Adresse im Netzwerk bekannt, siehe ⇨  19
1. Rufen Sie das Menü **Start** auf.
 2. Wählen Sie den Menüpunkt **Einstellungen** an.
Der Dialog **Einstellungen** erscheint.
 3. Wählen Sie den Menüpunkt **Geräte** an.
Der Dialog **Drucker & Scanner hinzufügen** erscheint.
 4. Wählen Sie den Menüpunkt **Geräte oder Scanner hinzufügen** an.
Drucker und Scanner werden gesucht.
 5. Scrollen Sie zum Ende der Ergebnisliste und wählen Sie **Der gewünschte Drucker ist nicht aufgelistet** an.
Der Dialog **Drucker hinzufügen** erscheint.
 6. Aktivieren Sie die Option **Lokalen Drucker oder Netzwerkdrucker mit manuellen Einstellungen hinzufügen**.
 7. Wählen Sie die Schaltfläche **Weiter** an.
 8. Aktivieren Sie die Option **Neuen Anschluss erstellen**.
 9. Wählen Sie aus der Liste **Anschlusstyp** den Eintrag **Standard TCP/IP Port**.
 10. Wählen Sie die Schaltfläche **Weiter** an.
 11. Geben Sie im Feld **Hostname oder IP-Adresse** die IP-Adresse des Printservers ein.



WARNUNG


Lassen Sie bei der IP-Adresse führende Nullen weg.

12. Geben Sie im Feld **Anschlussname** eine Beschreibung ein.
13. Deaktivieren Sie die Option **Den Drucker abfragen und den zu verwendenden Treiber automatisch auswählen**.
14. Wählen Sie die Schaltfläche **Weiter** an.
15. (Markieren Sie im Bereich **Gerätetyp** die Option **Standard**.)
16. (Wählen Sie aus der Liste den Eintrag **Generic Network Card**.)
17. (Wählen Sie die Schaltfläche **Weiter** an.)
18. Wählen Sie aus den Listen **Hersteller und Drucker** das Druckermodell.
19. Wählen Sie die Schaltfläche **Weiter** an.
20. Geben Sie im Feld **Druckername** eine Beschreibung ein.
21. Wählen Sie die Schaltfläche **Weiter** an.
Der Drucker wird installiert.
22. Aktivieren Sie die Option **Drucker nicht freigeben**.
23. Wählen Sie die Schaltfläche **Weiter** an.
24. Wählen Sie die Schaltfläche **Testseite drucken** an.
Eine Testseite wird gedruckt.
25. Wählen Sie die Schaltfläche **Fertig stellen** an.
↳ Der Drucker ist auf dem Client angelegt. Drucken Sie über den angelegten Drucker, wird der Druckjob auf dem am Printserver angeschlossenen Drucker ausgegeben.

Drucken in macOS

Der Drucker wird über die Systemeinstellungen auf dem Client angelegt.

Voraussetzungen:

- Die Hardware-Installation wurde ausgeführt, siehe ⇨ 18
 - Der Printserver und der Drucker sind eingeschaltet.
 - Der Printserver ist mit einer IP-Adresse im Netzwerk bekannt, siehe ⇨ 19
1. Rufen Sie die **Systemeinstellungen** auf.
 2. Wählen Sie die Schaltfläche **Drucker & Scanner** an.
 3. Wählen Sie das Icon  an.
Der Dialog **Hinzufügen** erscheint
 4. Wählen Sie die Schaltfläche **IP** an.
 5. Geben Sie im Feld **Adresse** die IP-Adresse des Printservers ein (mit führenden Nullen).
 6. Wählen Sie in der Liste **Protokoll** den Eintrag **Internet Printing Protocol - IPP**.
 7. Geben Sie in den Feldern **Name** und **Standort** freidefinierbare Beschreibungen ein.
 8. Wählen Sie in der Liste **Verwenden** den entsprechenden Druckertreiber.
 9. Wählen Sie die Schaltfläche **Hinzufügen** an.
Der Konfigurationsdialog erscheint
 10. Konfigurieren Sie die Druckeroptionen.
 11. Bestätigen Sie mit **OK**.
 - ↳ Der Drucker ist auf dem Client angelegt. Drucken Sie über den angelegten Drucker, wird der Druckjob auf dem am Printserver angeschlossenen Drucker ausgegeben.

Printserver konfigurieren

Der printserver ONE verfügt über eine Benutzeroberfläche, das Printserver Control Center, welches Sie in einem Internet-Browser (z. B. Microsoft Edge oder Safari) aufrufen.

Über das Printserver Control Center kann der printserver ONE konfiguriert, überwacht und gewartet werden.

1. Öffnen Sie Ihren Browser.
2. Geben Sie als URL die IP-Adresse des printserver ONE ein.
↳ Das Printserver Control Center wird im Browser dargestellt.



Wichtig:

Falls das Printserver Control Center nicht angezeigt wird, überprüfen Sie ob ein Gateway konfiguriert ist (⇒ 19) sowie die Proxy-Einstellungen des Browsers.

printserver ONE
by SEH

Bitte wählen Sie Ihre Sprache aus

SEH Computertechnik GmbH
Suding 11
33647 Bielefeld, Deutschland

Tel: +49 (0)521 94226-29
Fax: +49 (0)521 94226-50
Support: +49 (0)521 94226-44

E-Mail: info@seh.de
Web: www.seh.de

Kostenlose Garantieverlängerung <https://www.seh-technology.com/services/warranty-and-ma.html>
Support-Kontakte & Informationen: <http://www.seh-technology.com/support>
Vertriebskontakte & Informationen: <http://www.seh-technology.com/sales>

© 2021 SEH Computer-Technik GmbH. Germany
All trademarks, registered trademarks, logos and product names are property of their respective owners.



Detaillierte Informationen zu Administration, Konfiguration und Überwachung des Printservers entnehmen Sie der Printserver-Benutzerdokumentation.



Important:

The latest version of the EC declaration of conformity can be downloaded from the website of SEH Computertechnik GmbH:

<http://www.seh-technology.com/services/ce-notifications.html>

Manufacturer's Name
SEH Computertechnik GmbH

Manufacturer's Address
**Suedring 11
33647 Bielefeld
Germany
Phone ++49 (0) 521 - 94226-0**



EC – Declaration of Conformity

Herewith SEH Computertechnik GmbH declares that

Product: **External Printserver**

Type designation: **printserver ONE**

Serial No.: 303 yyyy mm nnnnn (yyyy = year, mm = month, nnnnn = seq. no.)

is in conformity with the provisions of the

DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF 26 FEBRUARY 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)

DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF 8 JUNE 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment + Amendment DIRECTIVE (EU) 2017/2102 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 15 November 2017 + COMMISSION DELEGATED DIRECTIVE (EU) 2015/863 of 31 March 2015 amending Annex II

DIRECTIVE 2009/125/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF OCT, 21 2009 establishing a framework for the setting of ecodesign requirements for energy-related products

Standards applied:

**EN 55035:2017; EN 61000-3-2: 2014; EN 61000-3-3: 2013;
EN 55032:2015 Class B
EN 50581:2012**

To meet the above specifications, the user has to comply with all instructions defined in the enclosed manual.

The separate EC-Declaration of Conformity of the product's included External Power Supply is available on www.seh.de.

Bielefeld, September 10, 2020

Dipl.-Ing. Rainer Ellerbrake, General Manager

Federal Communication Commission (FCC) Notice

The user has to comply with all instructions defined in this manual. It is not allowed to do product modifications not expressly approved by SEH.

Note:

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



FC Compliance Statement

Supplier's Declaration of Conformity

Herewith **SEH Technology, Inc.** declares that

Product: External Print Server

Type designation: **printserver ONE**

Serial No.: 303 yyyy mm nnnnn (yyyy = year, mm = month, nnnnn = seq. no.)

Device Type: Unintentional Radiator: Other Class B digital devices & peripherals

complies with FCC Title 47 part 15.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any receiving interferences received, including interferences that may cause undesired operation.

September 14, 2020

Responsible Party – U.S. Contact Information
SEH Technology, Inc.
518 Kimberton Rd. PMB 410
Phoenixville, PA 19460
Phone: +1 (0) 610-933-2088

File name: SDOC2020-09_printserver_ONE.doc

Open Source Software License Disclaimer and License Texts

This product was developed by SEH Computertechnik GmbH and contains and uses software which is licensed under the terms of various Open Source software licenses. All information including disclaimer and licenses can be found in the device's web-based user interface, the Printserver Control Center, on the page 'Open Source Software' (http://<IP address> /opensrc_en.html).

Manufacturer:

SEH Computertechnik GmbH

Suedring 11

33647 Bielefeld, Germany

Phone: +49 (0)521 94226-29

Fax: +49 (0)521 94226-99

Support: +49 (0)521 94226-44

Email: info@seh.de

Web: <http://www.seh.de>

**Important Internet Resources:**

Support Contacts and Information:

<http://www.seh-technology.com/services/support.html>

Sales Contacts and Information:

<http://www.seh-technology.com/company/management-and-staff/seh-sales-team.html>

Downloads:

<http://www.seh-technology.com/services/downloads.html>



© 2020 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners.

The contents of this document are subject to change without notification.

This product uses 'Open Source Software'. For further information, go to

<http://www.seh-technology.com/services/licenses.html>.

The product documentation gives you valuable information about your product. Keep the documentation for further reference during the life cycle of the product.